







Position	Code	description
	5313233141	FLOAT
	5313235441	SUPPORTO POMPA NERO (EPDM) ETAM
	5313240141	CLOSURE
	5313247361	COVER
	5313232501	HOUSING RIGHT BLACK(PP) ETAM
	5313232511	HOUSING LEFT BLACK(PP) ETAM
	5313232881	SIDE DOOR HINGE
	5313232641	SUPPORT MICROSWITCH
001	7313233971	WATER TANK
002	5513222391	COVER
003	5313247681	SIDE LEFT
004	5013212061	POWER SUPPLY CORD
005	7313238751	COVER ASSEMBLY
006	5313240321	STOPPER
007	5313240301	COVER
008	5913214771	KNOB
009	5313232561	FUNNEL
010	5313247691	SIDE RIGHT
011	5313240121	REAR PANEL
012	6113211861	INSERT FINGER STOP
014	7313243221	CONTAINER ASSEMBLY
015	5313240021	TRAY
016	5913215191	COVER
017	5513222661	KNOB
018	7313243251	CONTROL PANEL YES PCB
019	7313243261	FRONT PANEL
020	7313238701	FROTHER
021	5313220031	O-RING
022	5313231221	TUBE LOWER
025	7313245021	DISTRIBUTING
026	7313228691	DOOR ASSY
027	5332169200	MEASURING SPOON
028	6013213661	CUP PLATE
031	7313234141	COMPLETE GRINDER
032	7313212631	TROLLEY
033	5313213591	STOPPER
034	5113211381	SWITCH

035	5213217901	POWER BOARD
035	5213221091	POWER BOARD 230V
036	7313214521	REGULATOR
037	5313240511	PUSH BUTTON ON-OFF
038	5213217921	ON/OFF BOARD
039	5313216331	FUNNEL
040	5313213371	FLAP
041	5313246191	SUPPORT
042	5313229731	FOOT
045	9812631250	SCREW
046	6013213181	FILTER
047	5332149100	O-RING
048	5513227891	DIFFUSER KIT
049	5313213431	RUBBER PAD
050	5313213391	ARM
054	5513211371	REGULATOR
055	5313239061	TUBE
056	6113210021	CLIP
057	5313236031	CONNECTION
058	7313228701	TRANSMISSION KIT
059	7313217261	ASS. GRINDS (ECM)
060	5313243071	BELT
061	5213216051	HALL SENSOR
062	5132110500	MICROSWITCH
063	5213212381	MOTOR BOARD (ECM)
064	5113211311	PUMP
065	5313217741	O-RING
066	5313217701	O-RING D=3,85
070	5213213321	PROTECTOR
071	5313217871	TUBE DI=3 DE=6 L=200
072	5513220521	FILTER
073	5013255141	WIRING
074	5313233181	TUBE
075	5213218571	-
076	5213217891	SENSOR REED
077	5513214661	SLIDER
078	5313240311	TUBE (SIL NAT) DI=4 L=110
079	5113210211	MICROSWITCH

080	5513213501	TUBE PTFE DI2-DE4 L=150 2BUSHES
081	7313219401	SAFETY VALVE
082	5513212901	TUBE PTFE DI2-DE4 L=290 2BUSHES
084	5313228791	GASKET
085	5513212881	TUBE PTFE DI2-DE4 L=270 2BUSHES
086	5332239200	CONNECTOR
087	5332239300	SPACER 5XD5.2XD7.9 NATURAL
088	5013252531	WIRING TCO
089	5213215661	SENSOR NTC
090	5513214291	GENERATOR
091	5013252541	WIRING TCO
092	5113210211	MICROSWITCH
093	5132104100	MICROSWITCH
094	7313244171	MECHANICS VALVE
095	9812631250	SCREW
096	7313236301	TAP
097	5313217601	FILTER
098	5332149100	O-RING
099	5313213841	STOP