



| Position | Code | description |
|----------|------------|----------------------|
| 01 | EE1155 | COVER |
| 02 | 7313286099 | SAFETY CAP |
| 03 | T67112 | GASKET |
| 04 | EE1156 | COVER |
| 05 | EE1157 | KNOB |
| 06 | EE1158 | KNOB |
| 07 | 535692 | O-RING |
| 08 | 5332102100 | MIXER |
| 09 | 536372 | GASKET |
| 10 | EE1159 | SUPPORT |
| 11 | 5332100500 | TUBE |
| 12 | EE1160 | TRAY |
| 14 | EE1161 | KNOB |
| 15 | EE1056 | TAP |
| 16 | EE1054 | TUBE |
| 18 | EE1125 | BOILER UPPER |
| 19 | EE1162 | CONNECTOR |
| 20 | EE1061 | CONNECTION |
| 21 | EE1051 | DISTRIBUTOR |
| 22 | EE1023 | GASKET |
| 23 | EE1052 | DIFFUSER |
| 24 | EE1026 | THERMOSTAT |
| 25 | EE1006 | FUSE |
| 26 | EE1059 | FUSE |
| 27 | EE1193 | BOILER |
| 28 | EE1022 | GASKET |
| 29 | 5332100600 | CAP |
| 30 | EE1163 | EXTENSION |
| 31 | EE1164 | PROFILE |
| 32 | EE1192 | Red Warning Light |
| 33 | 512888 | Orange Warning Light |
| 34 | EE1165 | CONTROL PANEL |
| 35 | 5132100700 | SWITCH |
| 36 | EE1073 | PUSH BUTTON |
| 37 | 5132100800 | SWITCH |
| 38 | EE1166 | BODY |
| 39 | EE1167 | CUP PLATE |

| | | |
|----|------------|-----------------|
| 41 | EE1009 | MEASURING SPOON |
| 42 | EE1168 | SUMP |
| 43 | EE1169 | ADAPTER |
| 45 | EE1171 | BOTTOM |
| 46 | EE2010 | FOOT |
| 47 | EE1172 | SUPPORT |
| 48 | EE1191 | HEATING Element |
| 49 | EE1070 | FUSE |
| 50 | EE1069 | THERMOSTAT |
| 51 | EE1071 | VALVE |
| 52 | EE1067 | PLATE |
| 53 | EE1173 | GASKET |
| 54 | EE1066 | RING |
| 55 | 7313281249 | CARAFE |
| 56 | ES000 | *NOT AVAILABLE |
| 58 | EE1064 | TUBE |
| 59 | EE1176 | REGULATOR |
| 61 | 5513200149 | FILTER |
| 62 | EE1178 | SUPPORT |
| 63 | EE1179 | GASKET |
| 64 | EE1180 | TANK |