



Position	Code	description
	9811040850	SCREW
001	7313286099	SAFETY CAP
002	5332183200	KNOB
003	5332183000	COVER
004	5932115200	COVER
005	5332184500	HANDLE
006	T20869	FILTER
007	7313276769	TANK
009	7313277379	SUMP
010	5313211751	LEVER
013	5332173500	O-RING
014	6132100800	SPRING
015	537009	ADAPTER
016	5332109000	PISTON
017	5332108700	GASKET
018	5332169200	MEASURING SPOON
019	5332184000	CONTAINER PLASTIC
020	5332128200	COVER
023	5332183300	KNOB
024	5332183700	COVER
025	5332128700	PIN
026	6113211791	SPRING
027	5932115100	COVER
028	5332182300	SUPPORT
029	5332182800	HANDLE
030	5132100700	SWITCH
034	5332182400	PUSH BUTTON ON-OFF
035	5513200149	FILTER
036	5932115400	CONTROL PANEL
037	5332182700	FILTER HOLDER
038	7313274899	POWER SUPPLY CORD
039	5332100100	GASKET
040	537243	LEVER
043	5332182600	HINGE
044	5332184100	PANEL
045	7332183800	CARAFE
046	7313281249	CARAFE

047	5332186100	COVER
048	5332201700	COVER
049	532233	RUBBER PAD
050	5332182100	BASE
053	6132100000	SPRING
054	5332182500	DOOR
055	5332128900	COVER
056	535747	WIRE CLAMP
057	5232100000	THERMOSTAT
058	5332129300	DISCHARGE PIPE
059	6132100100	SPRING
060	7313273679	HEATING Element
064	5332131100	TUBE
065	6132100300	SPRING
066	7313276649	TUBE
067	5332130900	TUBE
068	7313273429	WIRING TCO/LAMP
069	7032101000	PLATE
070	5332102900	GASKET
073	5332183600	SUPPORT
075	535789	FROTHER
076	6113210481	TUBE DISTRIBUTING
077	535733	JOINT
078	5332196500	CUP PLATE
079	5332181900	BODY
080	5332183800	STOP
083	T67109	RING
084	T20872	FILTER
085	T20877	SUPPORT
086	5513200419	GASKET
087	T20871	DISTRIBUTOR
088	537177	GASKET
089	T67105	GASKET
090	T35309	VALVE
093	5332186900	EXTENSION
094	5313270679	TUBE
097	5332106800	KNOB
098	5332182900	COVER

099	611900	SPRING
100	7313273579	VALVE
103	6232112600	BOILER UPPER
105	T61274	TUBE
106	535750	GASKET
107	T35110	BOILER LOWER
108	7313273639	WIRING TCO/LAMP
109	VI000	SEE TECHNICAL INFORMATION
110	T20897	SUPPORT